User Manual

> DPF Software

Connect your digital-picture-flashcard to your computer.

In case the DPF-Software won't start automatically, please open the Explorer and choose the CD-drive „MYCD_VOL".

Double click on the executable file (.exe)

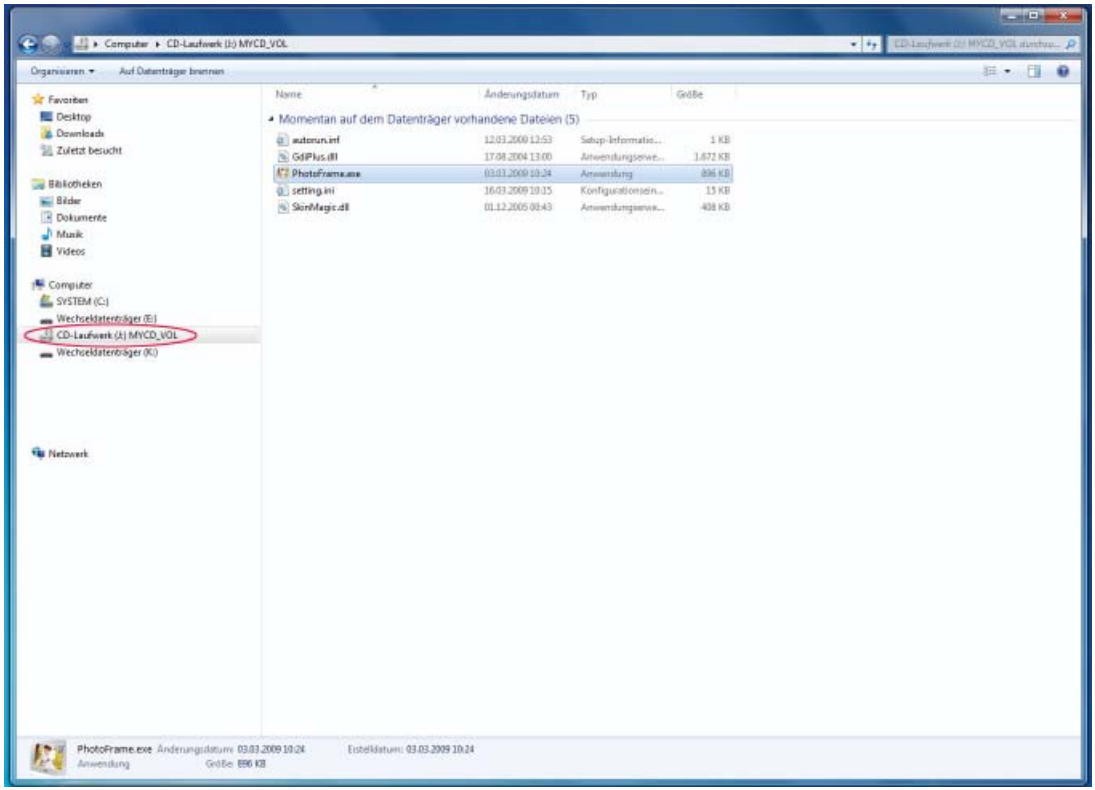

Now choose the folder left in the navigation bar, which contains the photos you want to load onto your digital-picture-flashcard.

The photos of the chosen folder can be seen on the lower bar of the DPF-Software.

Choose your first photo.

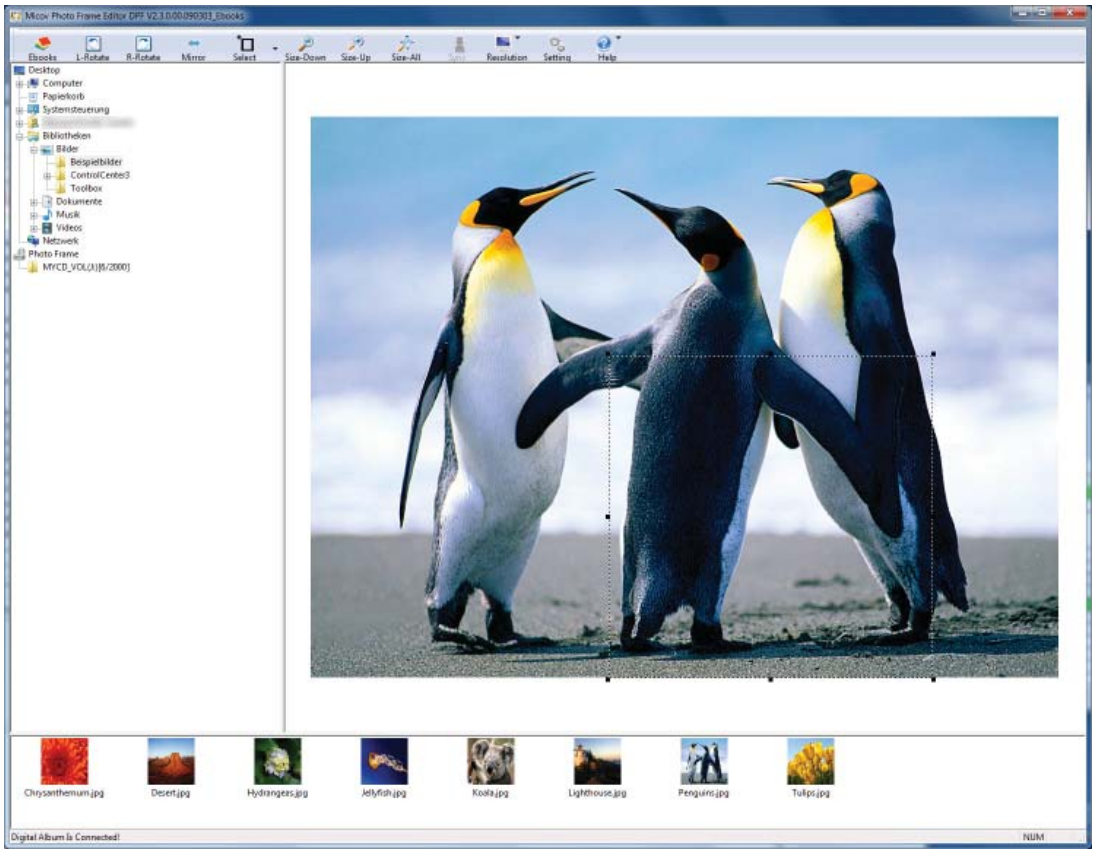

Specify your display details by altering the chosen square, to the way it is supposed to be displayed on the digital-picture-flashcard

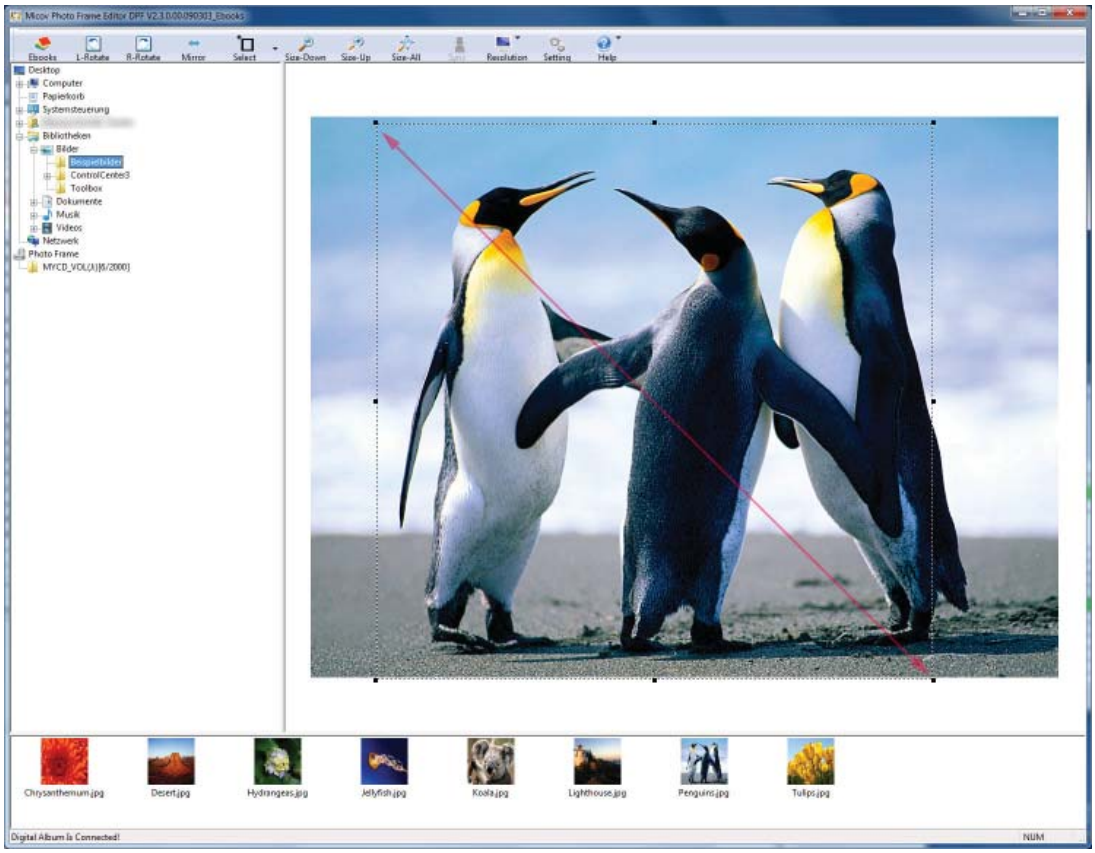

With a right click on the mouse and a click on „select" you will confirm your screen selection.

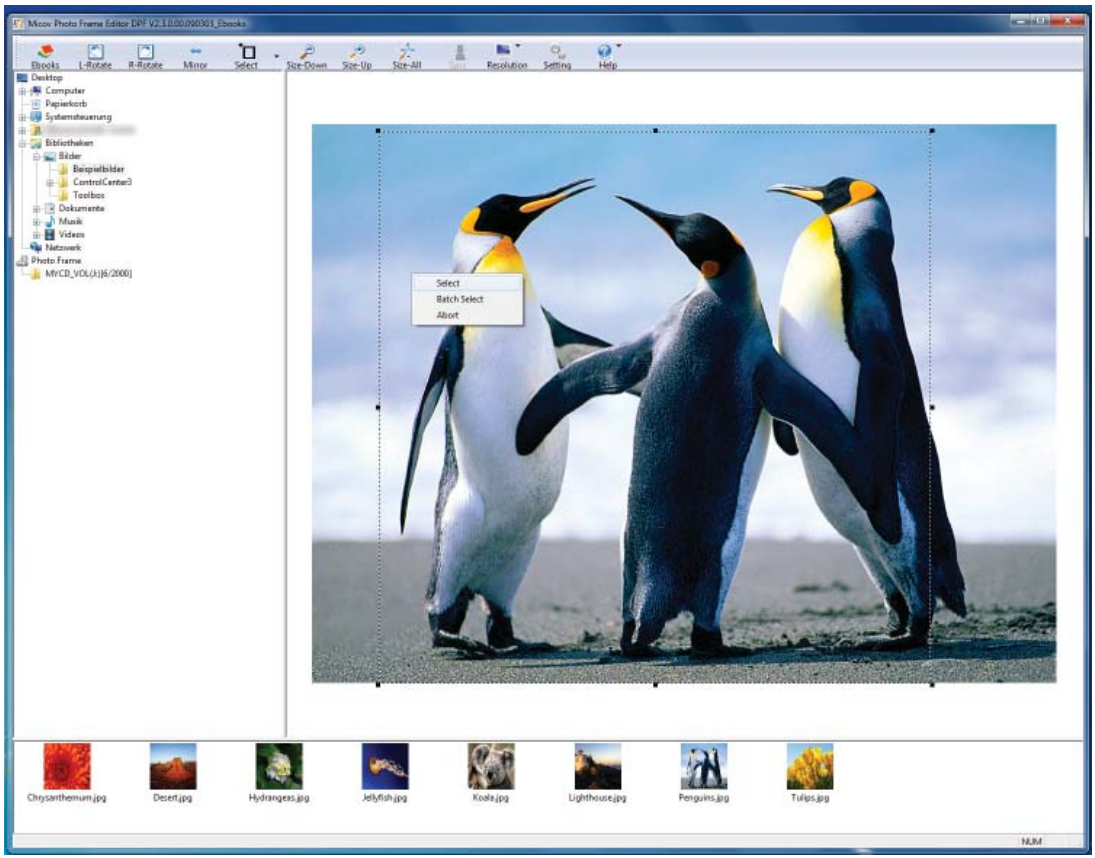

Press the button „Sync" on the top bar – now the chosen photo with the equivalent image section will be transferred to the drive for your slide show.

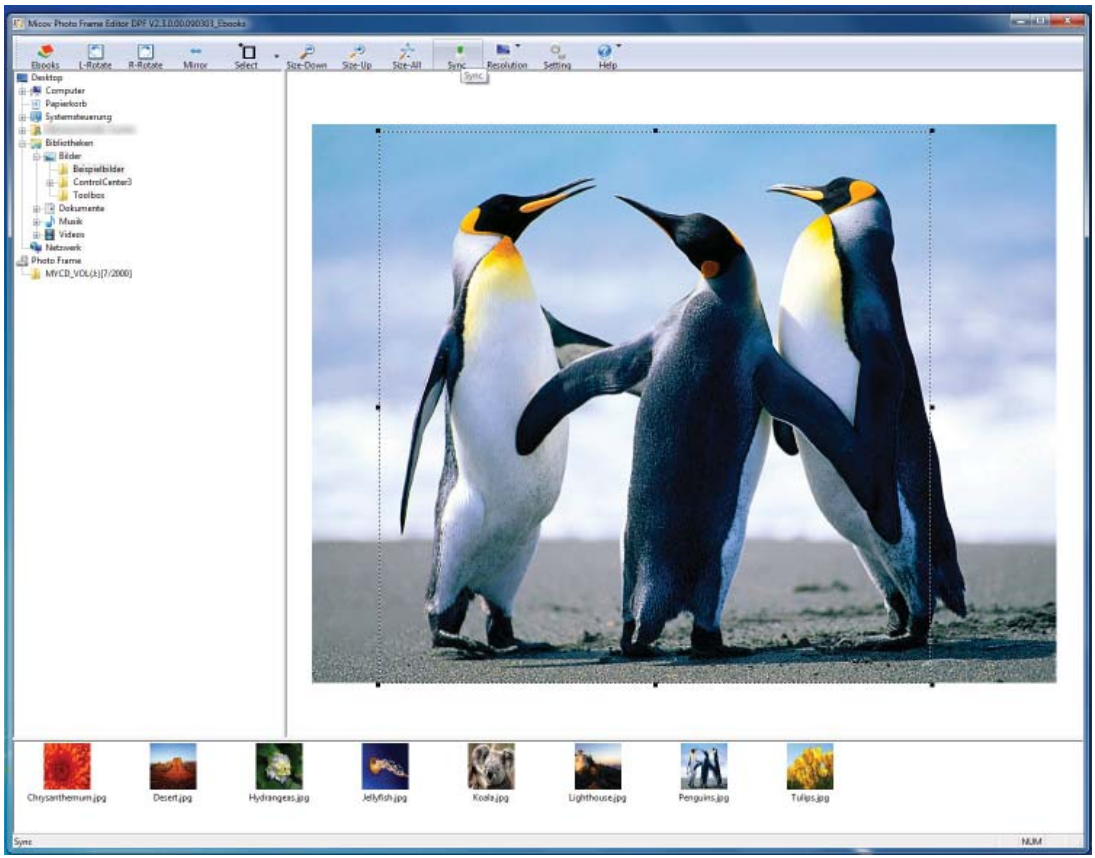

When being confirmed with „OK“ the photo will be synchronized.

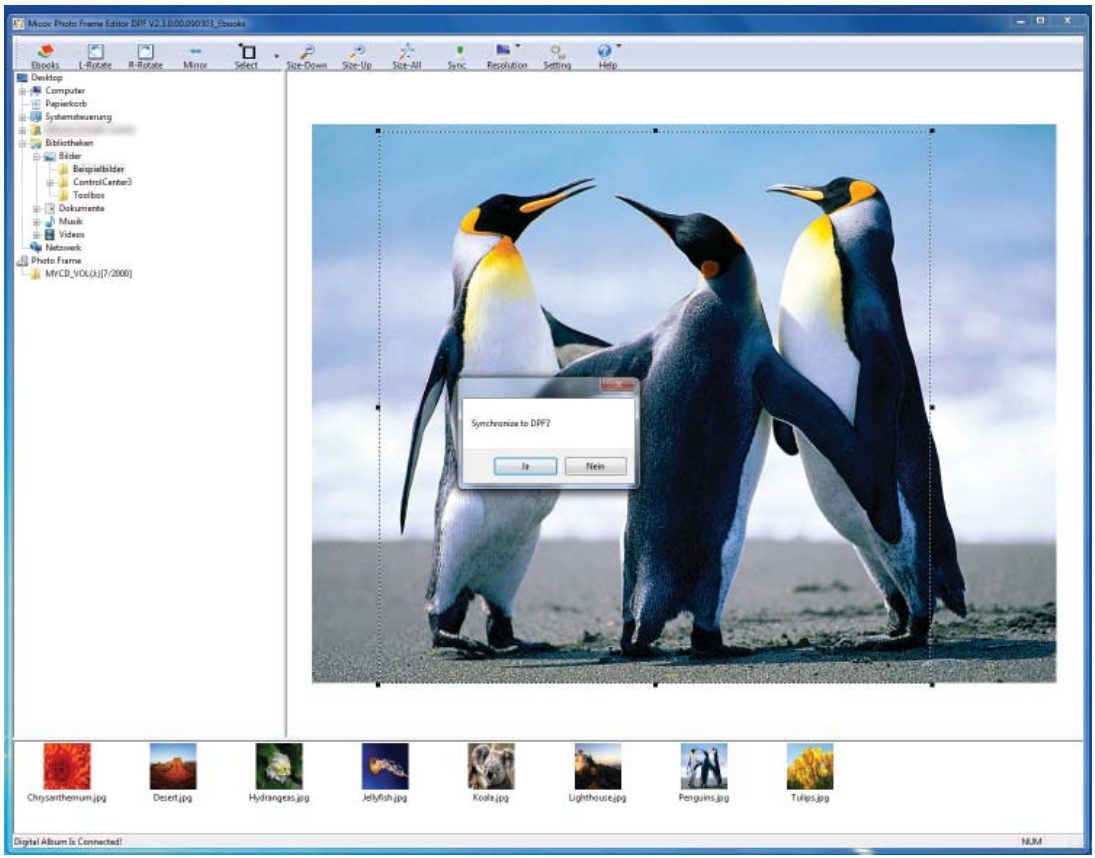

Another confirmation with „OK“ will end the synchronization.

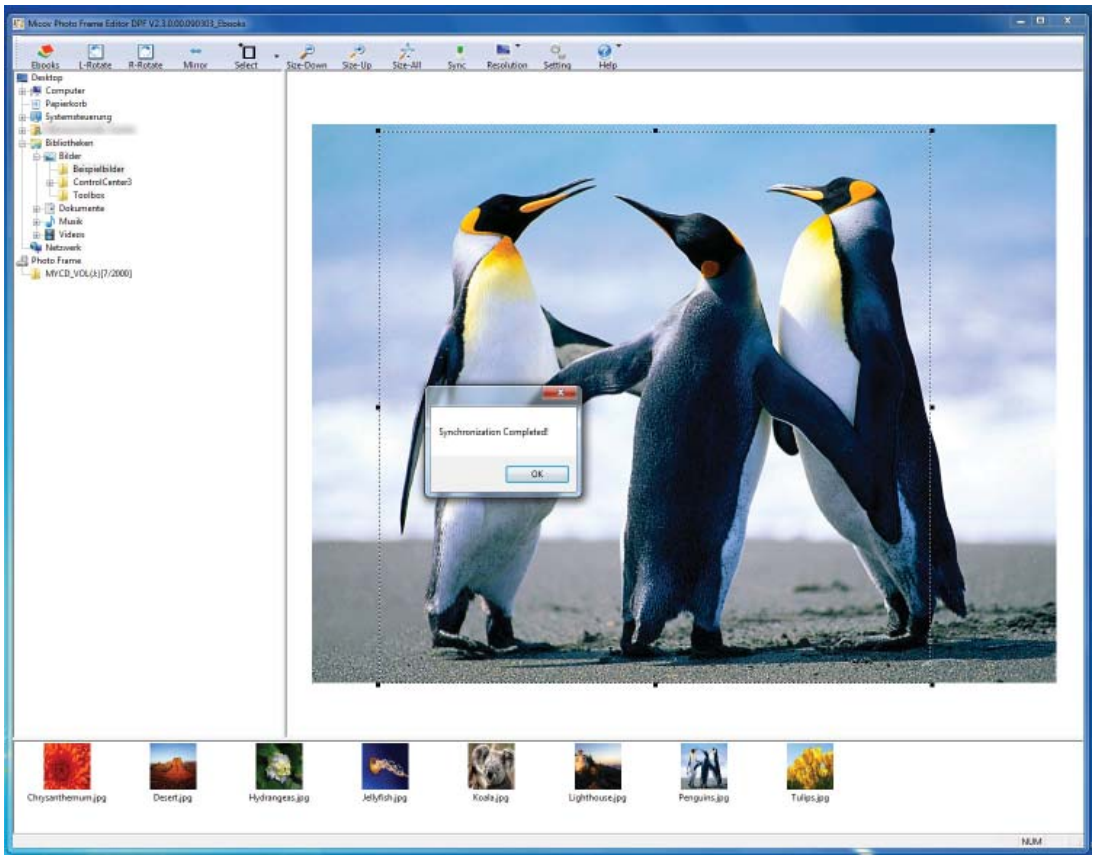

Go back to the CD-drive „MYCD“ and here, you can see all photos, which will be displayed on your digital-picture-flashcard via slide show.